CONTROL PANEL PARTS

For Model: RB270PXBB0, RB270PXBQ0
(BLACK)(DESIGNER WHITE)

30" ELECTRIC
BUILT−IN DOUBLE OVEN
STANDARD CLEAN LOWER OVEN
SELF CLEAN UPPER OVEN

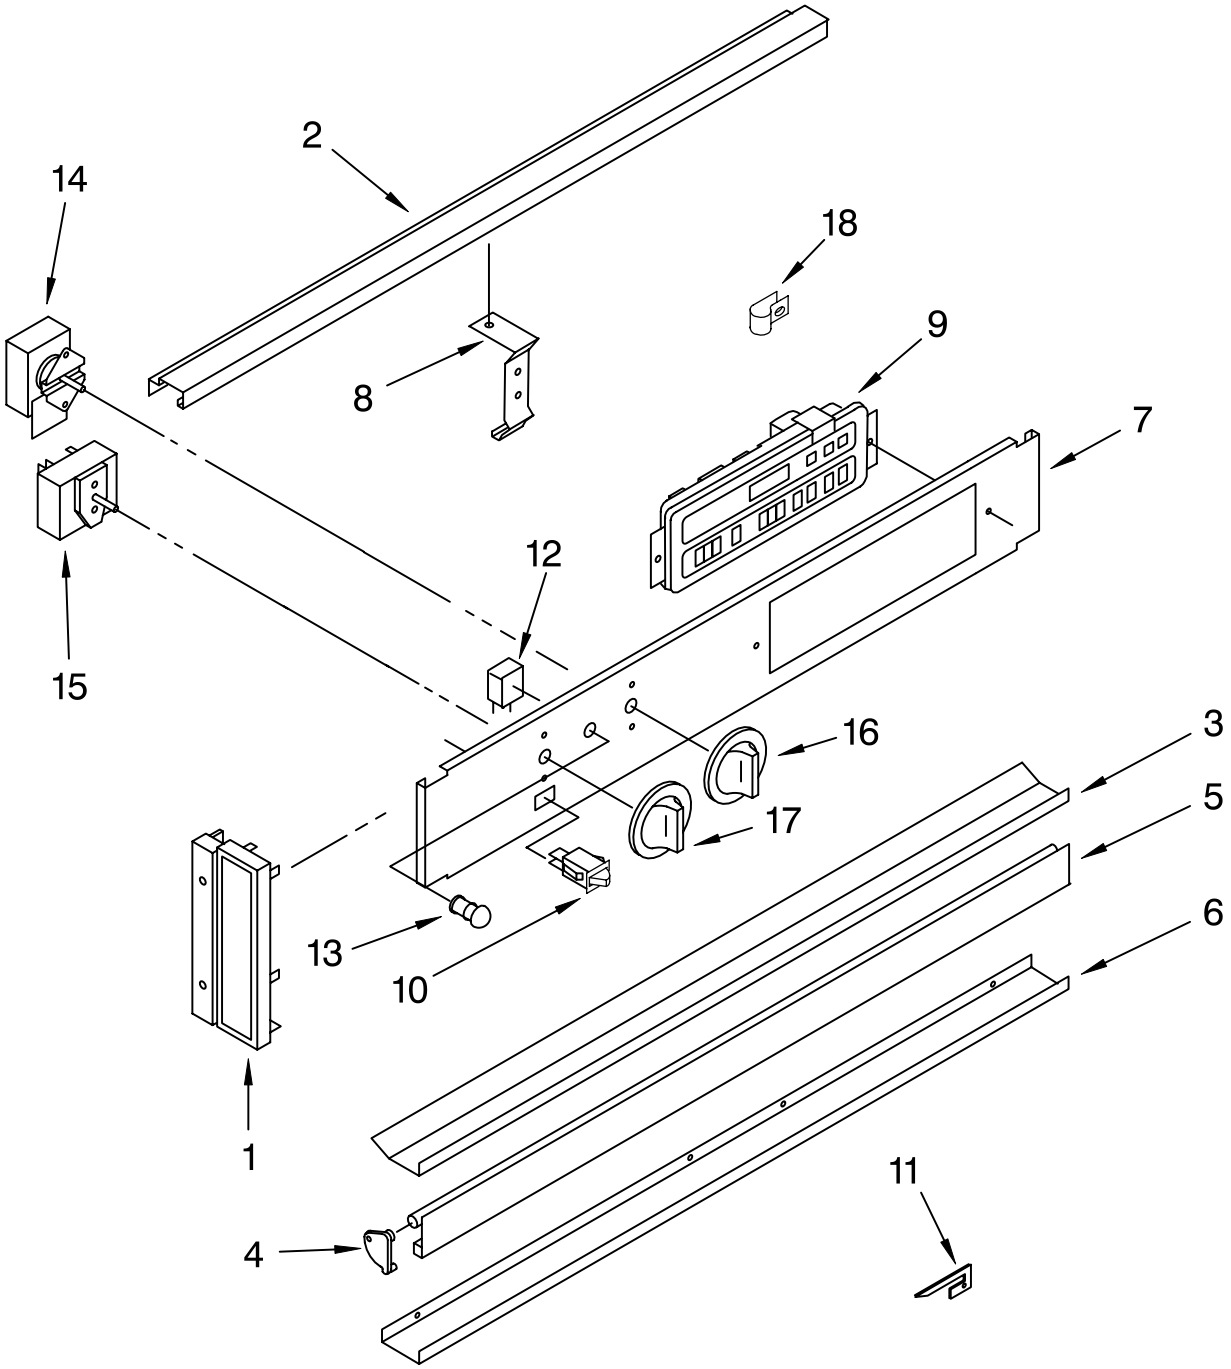

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: RB270PXBB0, RB270PXBQ0
(BLACK)(DESIGNER WHITE)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1		End Cap
	3149239	Right Side (Black)
	3149238	Left Side (Black)
	3187927	Right Side (White)
	3187926	Left Side (White)
2		Trim, Top
	3149240	Black Model
	3188152	White Model
	342055	Screw (2)
3		Trim, Center
	3183577	Black Model
	3188165	White Model
	98520	Screw (2)
4		End Trim, Vent Door Left Hand
	3148697	Black Model
	3148471	White Model
		Right Hand
	3148698	Black Model
	3148472	White Model
5		Door, Vent
	3183505	Black Model
	3187983	White Model
6	3148618	Trim, Bottom
	342043	Screw (2)
7		Control Panel
	3182917	Black Model
	3182918	White Model
	98520	Screw (4)
8	3183500	Bracket, Stiffener
	311773	Screw
9		Electronic Timer
	3169256	Black Model
	3169257	White Model
	98520	Screw (4)
10		Switch, Rocker
	3182717	Black Model
	3182718	White Model
11	3149142	Shield, Air
	98520	Screw
12	314031	Light, Indicator
13	313101	Lens, Amber
14	3169303	Thermostst
	3178002	Screw (2)
15	3183583	Switch, Selector
	155023	Screw (2)
16		Knob, Thermostat
	3183106	Black Model
	3183107	White Model
17		Knob, Selector
	3183109	Black Model
	3183110	White Model
18	308609	Strain Relief

FOLLOWING PARTS NOT ILLUSTRATED

LITERATURE PARTS

LIT3186640	Tech Sheet
LIT3183635	Installation Instructions
LIT3188184	Use & Care Guide
LIT3181454	Accessory Brochure

UPPER OVEN PARTS

For Model: RB270PXBB0, RB270PXBQ0
(BLACK)(DESIGNER WHITE)

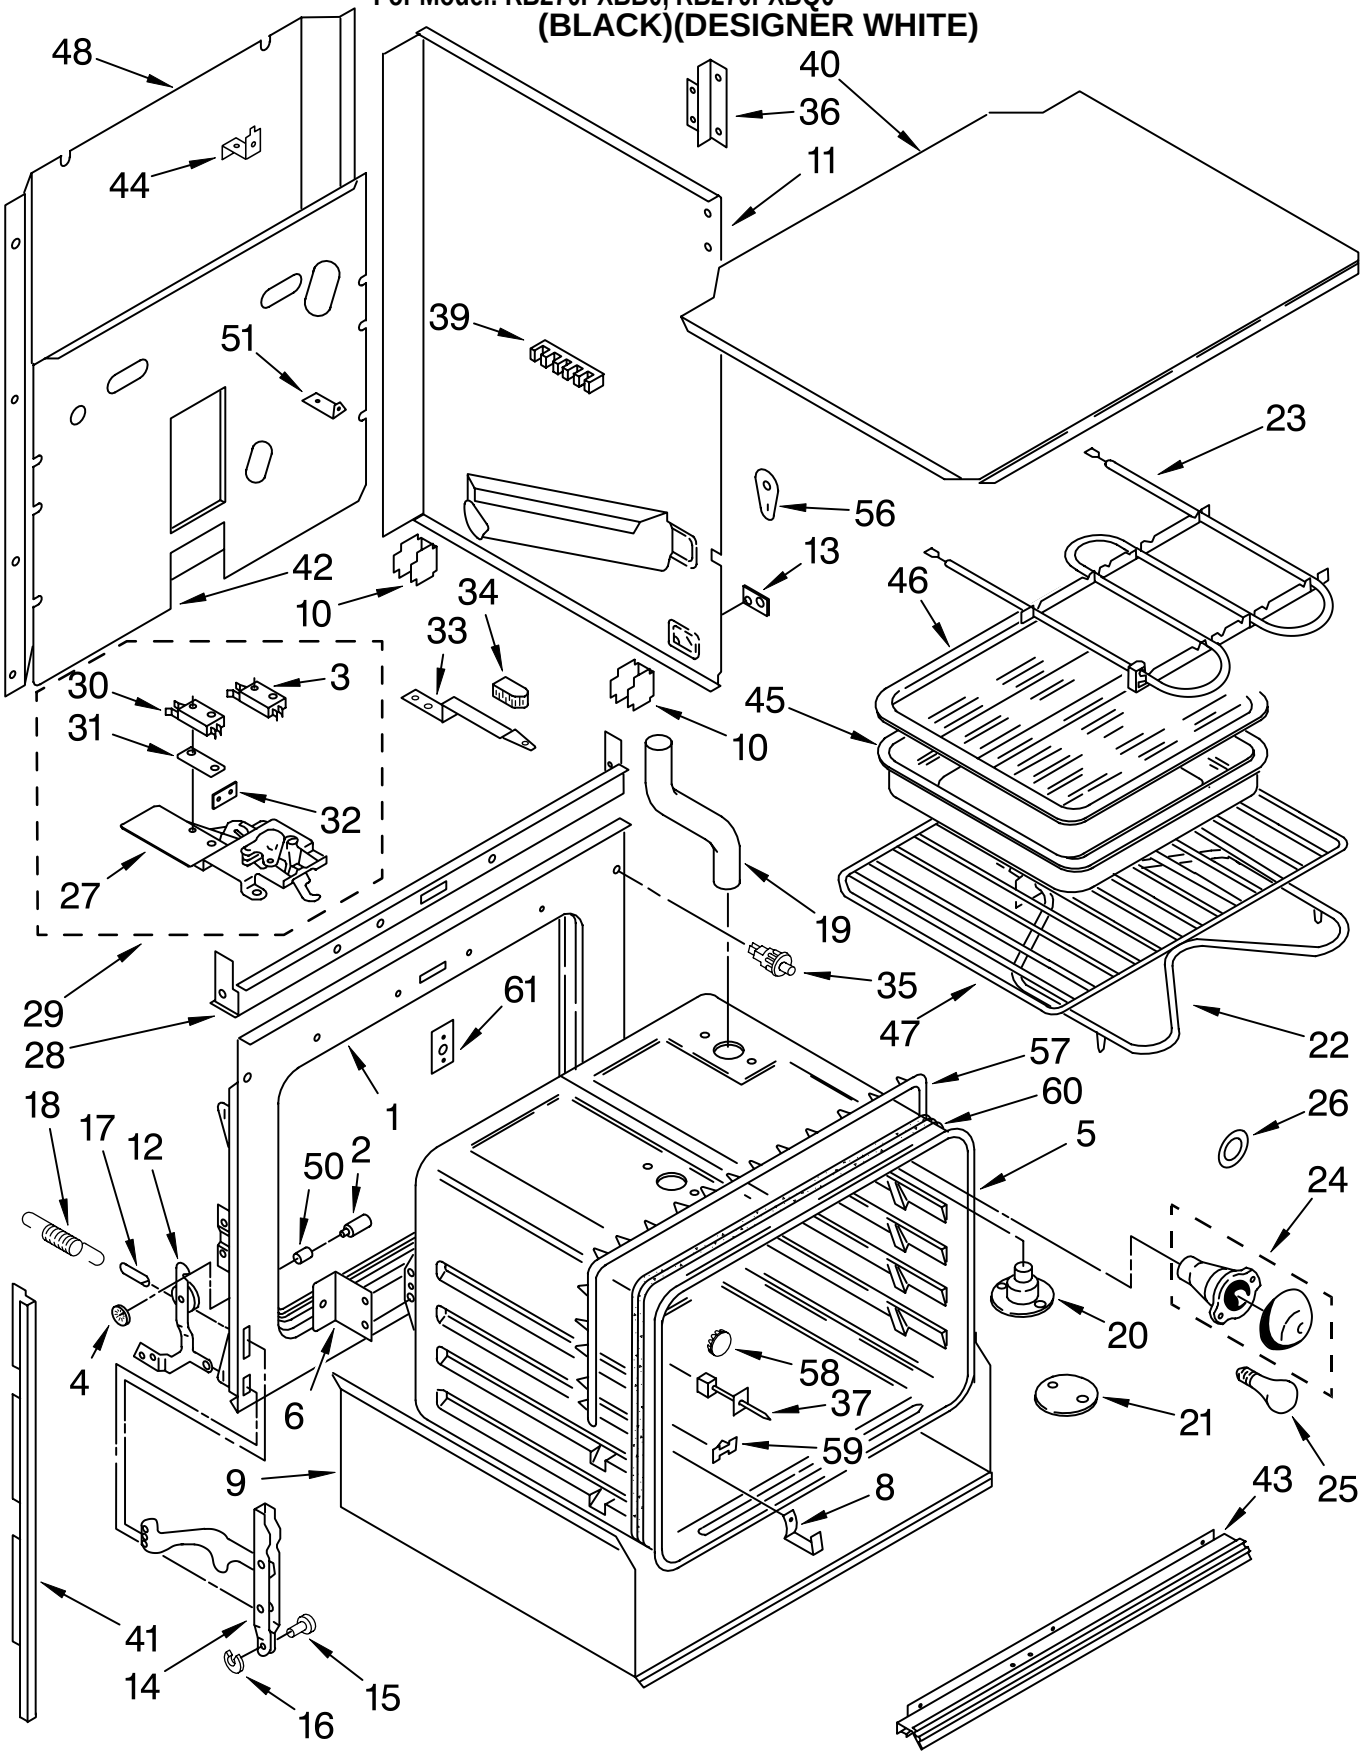

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UPPER OVEN PARTS

For Model: RB270PXBB0, RB270PXBQ0
(BLACK)(DESIGNER WHITE)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	3176714	Frame Front
2	307985	Pin, Hinge Ear (2)
3	3178187	Switch, Latch
4	308306	Pushnut (2)
5	3182032	Oven, 30" Pyro
6	310713	Bracket, Oven Mounting (2)
	343641	Screw, 10−16 x 1/2 (6)
8	313382	Clip, Therm Bulb (2)
9	3185944	Insulation Tray
	3148107	Screw, 8 x 1/2 (2)
10	311774	Support, Side Wrapper (4)
11		Side Wrapper
	3185953	Right Side
	3185956	Left Side
	3148107	Screw, 8 x 1/2 (4)
12		Hinge Ear
	3185662	Right Side
	3185663	Left Side
13	310659	Plate (2) (Side Panel)
	308544	Screw, 10−24 x 1/2 (4)
14	3185664	Channel Arm (2)
15	307986	Pin, Hinge (2)
16	307594	Retainer Ring (2)
17	308125	Anchor Spring (2)
18	308126	Spring, Oven Door (2)
19	310836	Vent, Extension (2)
20	310839	Eliminator, Smoke
	343641	Screw, 10−16 x 1/2
21	310662	Plate Cover
	3148107	Screw, 8 x 1/2 (2)
22	660576	Unit, Bake
	3150532	Screw, 8 x 1/2 (2)
23	660579	Unit, Broil
	3150532	Screw (2)
24	3150505	Oven Light Assy.
25	311255	Bulb, Oven Light
26	3184533	Gasket, Light
27	3148668	Latch
28	3183796	Baffle, Top Insulation
	3148107	Screw, 8 x 1/2 (2)
29	3185413	Latch Assembly
	3148107	Screw, 8 x 1/2 (4)
30	3178671	Safety Switch
31	309245	Insulator, Switch
	3177988	Screw
32	313035	Terminal, Shield
	309258	Screw,6 x 3/8B (2)
33	310825	Latch, Handle
	308422	Screw, 10−24 x 1/2 (2)
34	3184039	Knob, Latch Handle
	3183294	Screw
35	310345	Switch, Door
36	310719	Bracket, Control Panel Mounting
37	3148440	Sensor, Heat
39	258076	Terminal Block
	112432	Nut (3)
	308043	Screw, 10−12 x 7/8
40	3185945	Cover, Top
	3148107	Screw, 8 x 1/2 (4)
41		Side Trim
	3187908	Left Side (Black)
	3187902	Right Side (Black)
	3187909	Left Side (White)
	3187903	Right Side (White)
42	3182052	Panel, Back
	3148107	Screw, 8 x 1/2 (6)
43		Hood, Lower Vent
	3188733	Black
	3188734	White
		Screw, 10A x 1/2
	309133	Black (3)
	307831	White (3)
44	311582	Stand Off
	3148107	Screw, 8 x 1/2
45	3147845	Pan, Broiler
46	3147563	Grid, Broiler
47	3185641	Rack, Oven Straight
	3185640	Rack, Oven Offset
48	3185961	Cover, Rear
	3148107	Screw, 8 x 1/2 (9)
50	309111	Snubber, Door (2)
51	309102	Bracket
56	3183005	Coverplate
	313638	Screw (2)
57	3185197	Seal, Door
58	3182814	Button, Plug
59	3169107	Plug, Oven
60	3169283	Seal, Heat
61	3184208	Plate, Cover

FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

310433	Insulation, Wrap
310435	Insulation, Back
3149328	Insulation, Top

LOWER OVEN PARTS

For Model: RB270PXBB0, RB270PXBQ0

(BLACK)(DESIGNER WHITE)

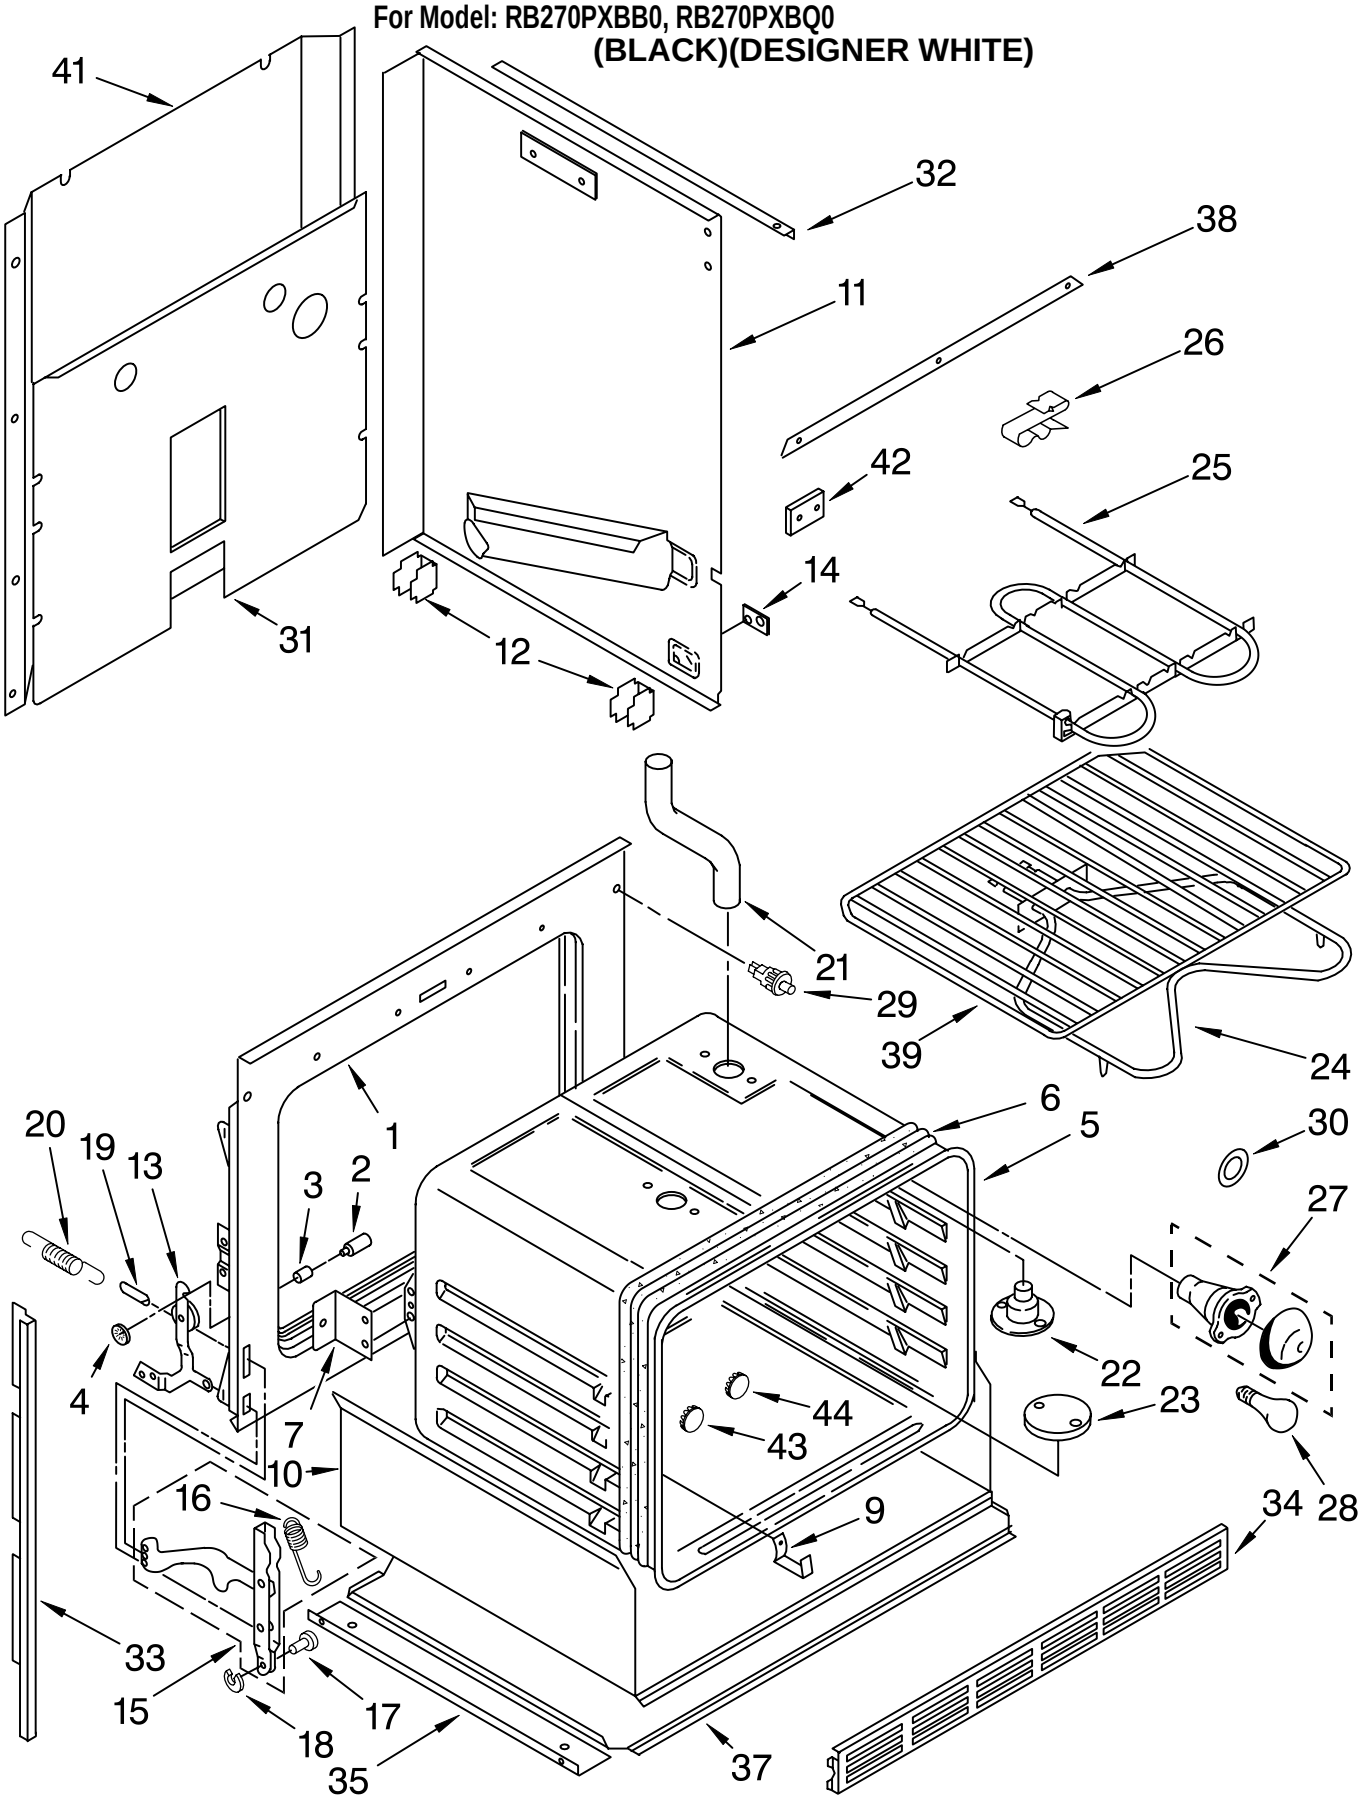

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LOWER OVEN PARTS

For Model: RB270PXBB0, RB270PXBQ0
(BLACK)(DESIGNER WHITE)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	3176719	Frame, Front
2	307985	Pin, Hinge Ear (2)
3	309111	Snubber, Door (2)
4	308306	Pushnut (2)
5	3182032	Oven, 30" Conventional Clean
	311056	Screw (3)
6	3169283	Heat Seal
7	310713	Bracket, Oven Mounting (2)
	343641	Screw (6)
9	313382	Clip, Therm Bulb (2)
10	3185944	Insulation Tray
	3148107	Screw, 8 x 1/2 (2)
11		Side Wrapper
	3185955	Right Side
	3185958	Left Side
12	311774	Support, Side Wrapper (4)
	3148107	Screw, 8 x 1/2 (8)
13		Hinge Ear
	3185662	Right Side
	3185663	Left Side
14	310659	Plate, Side Panel (2)
	308544	Screw, 10−24 x 1/2 (4)
15	3185665	Channel Arm (2)
16	311092	Spring, Door Stop (2)
17	307986	Pin Hinge
18	307594	Retainer, Ring
19	311897	Anchor, Spring (2)
20	308127	Spring, Oven Door (2)
21	311259	Tube, Lower Vent
	343641	Screw, 10−16 x 1/2
22	310840	Eliminator, Smoke
	3148107	Screw, 8 x 1/2 (2)
23	310662	Plate Cover
	3148107	Screw, 8 x 1/2 (2)
24	660576	Unit, Bake
	3150532	Screw, 10−32 x 5/8 (2)
25	660579	Unit, Broil
	3150532	Screw, 10−32 x 5/8 (2)
26	313570	Clamp
27	3150505	Oven Light Assy.
28	311255	Bulb, Oven Light
29	310345	Switch, Door
30	3184533	Gasket, Light
31	3182052	Panel, Back
	3148107	Screw, 8 x 1/2 (6)
32	255095	Angle Support (2)
	3148107	Screw, 8 x 1/2 (4)
33		Side Trim
	3187911	Left Side (Black)
	3187905	Right Side (Black)
	3187912	Left Side (White)
	3187906	Right Side (White)
	3148107	Screw, 8 x 1/2
34		Grill, Bottom
	310668	Black
	3149359	White
		Screw, 8−15 x 1/2
	309029	Black (3)
	338156	White (3)
35	311592	Angle Support (2)
	3148107	Screw, 8 x 1/2 (4)
37	3185945	Cover, Bottom
	3148107	Screw, 8 x 1/2 (4)
38	311592	Bracket Angle
39	3185641	Rack, Oven Straight
41	3185959	Cover, Rear
	3148107	Screw, 8 x 1/2 (11)
42	3183005	Plate, Cover
43	3182814	Button, Plug
44	3185086	Button, Plug

FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

310433	Insulation, Wrap
310435	Insulation, Back

LOWER OVEN DOOR PARTS

For Model: RB270PXBB0, RB270PXBQ0
(BLACK)(DESIGNER WHITE)

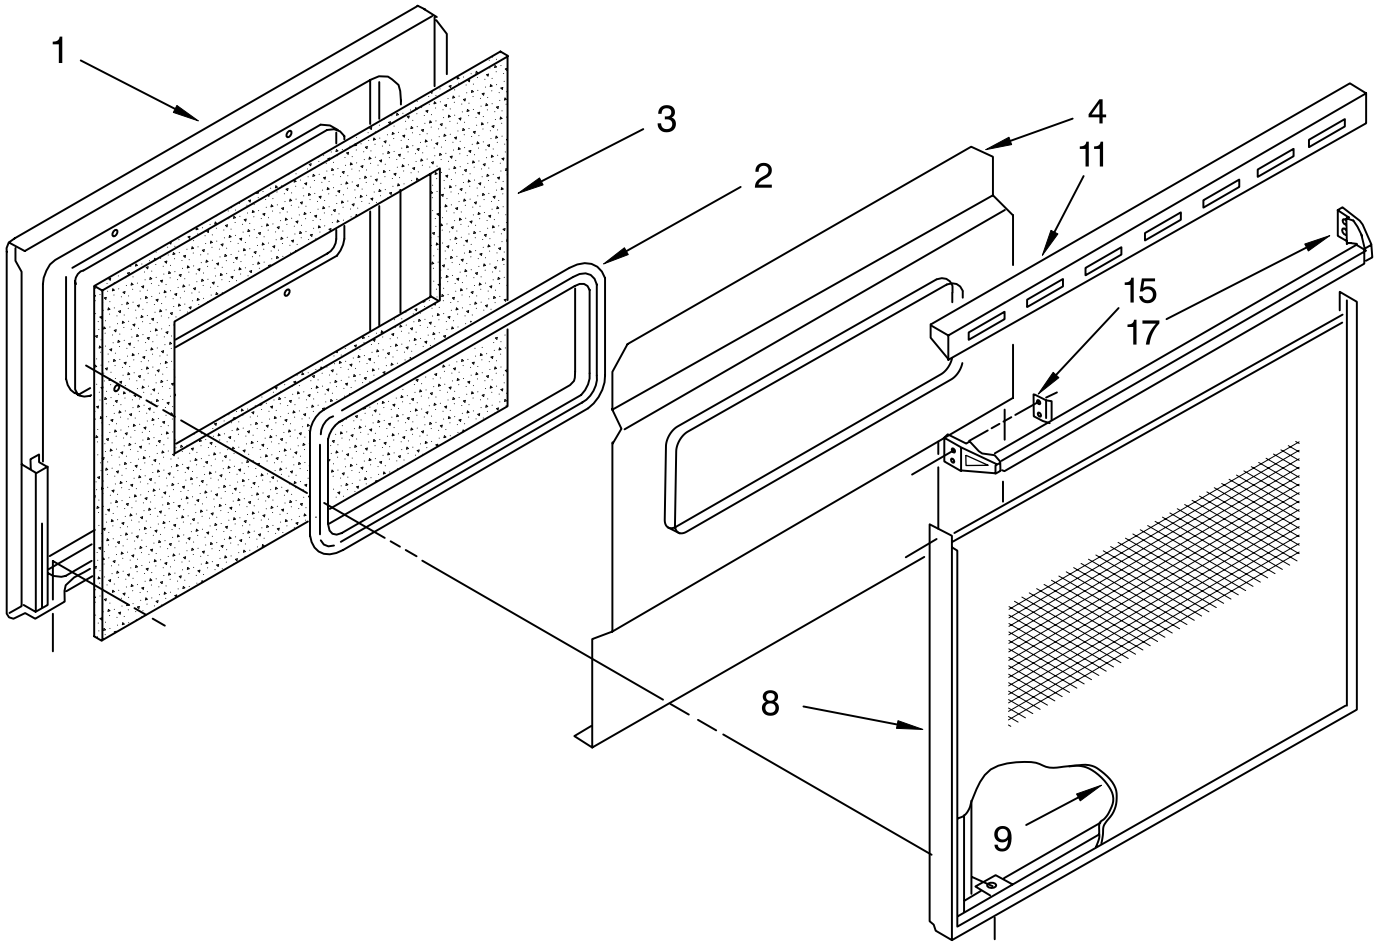

LOWER OVEN DOOR PARTS

For Model: RB270PXBB0, RB270PXBQ0
(BLACK)(DESIGNER WHITE)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	3172220	Liner, Door
	3148107	Screw, 8 x 1/2 (3)
	311056	Screw (4)
2	3148183	Seal, Pano Glass
3	3147954	Insulation
4	3148287	Retainer, Insulation
	3185647	Screw (6)
	3169203	Glass, Inner & Outer
8		Frame, Door 30"
	3171530	Black Model
	3187920	White Model
9		Glass, Outer
	3188054	Black
	3188053	White
	3149253	Screw (Black)
	3188403	Screw (White)
11		Top, Door Frame
	3148223	Black
	3149355	White
15	3148282	Clip (2)
17		Handle, Oven Door
	3187940	Black
	3187941	White
	355515	Screw, Handle (2)

OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	DESCRIPTION
		FOLLOWING PARTS NOT ILLUSTRATED
		SPLICING WIRES−−25FT. LENGTH
	242828	Wire, Black 12 Ga. 150°C
	242820	Wire, Black 14 Ga. 150°C
	242821	Wire, Blue 14 Ga. 150°C
	242822	Wire, Brown 14 Ga. 150°C
	242830	Wire, Brown 14 Ga. 200°C
	242823	Wire, Green 14 Ga. 150°C
	242824	Wire, Orange 14 Ga. 150°C
	242829	Wire, Red 12 Ga. 150°C
	242825	Wire, Red 14 Ga. 150°C
	242831	Wire, Red 14 Ga. 200°C
	242826	Wire, White 14 Ga. 150°C
	242827	Wire, Yellow 14 Ga. 150°C
	242832	Wire, Yellow 14 Ga. 200°C
		Miscellaneous
	3171507	Mounting Hardware

UPPER OVEN DOOR PARTS

For Model: RB270PXBB0, RB270PXBQ0
(BLACK)(DESIGNER WHITE)

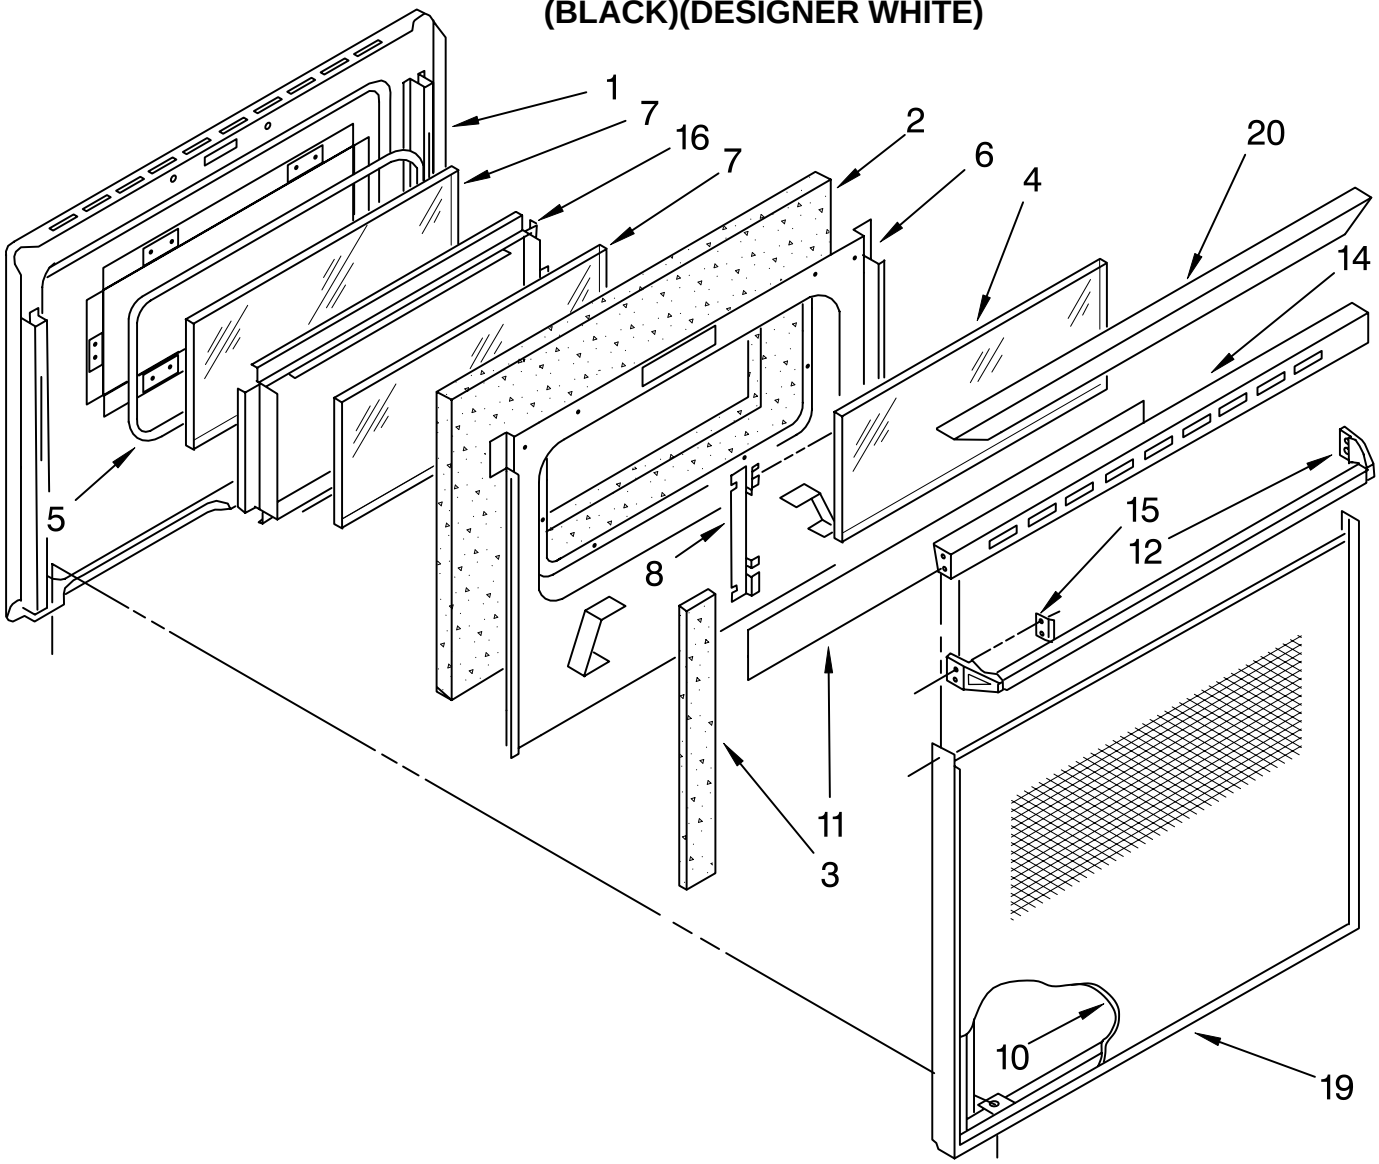

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	3172218	Liner, Door
	3148107	Screw, 8 x 1/2 (6)
	311056	Screw (2)
2	3147951	Insulation, Door
3	3148441	Seal, Flange (2)
4	3169202	Glass, Clear
	3185647	Screw
5	3148183	Seal, Window
6	3148159	Retainer, Insulation
	4173601	Screw (4)
7	3169203	Glass, Inner & Outer
8	3188553	Retainer, Glass (2)
10		Glass, Panel
	3188054	Black
	3188053	White
11	3188706	Foil, Door
12		Handle, Door
	3187940	Black
	3187941	White
	355515	Screw (4)
14		Trim, Panel
	3148223	Black
	3149355	White
15	3148282	Clip, Mtg. (2)
	3149333	Screw, Black
16	3148234	Frame, Inner Glass
	3185647	Screw (6)
19		Frame, Glass Panel
	3171530	Black Model
	3187920	White Model
20	3181367	Cap, Top (White Model Only)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Model: RB270PXBB0, RB270PXBQ0
(BLACK)(DESIGNER WHITE)

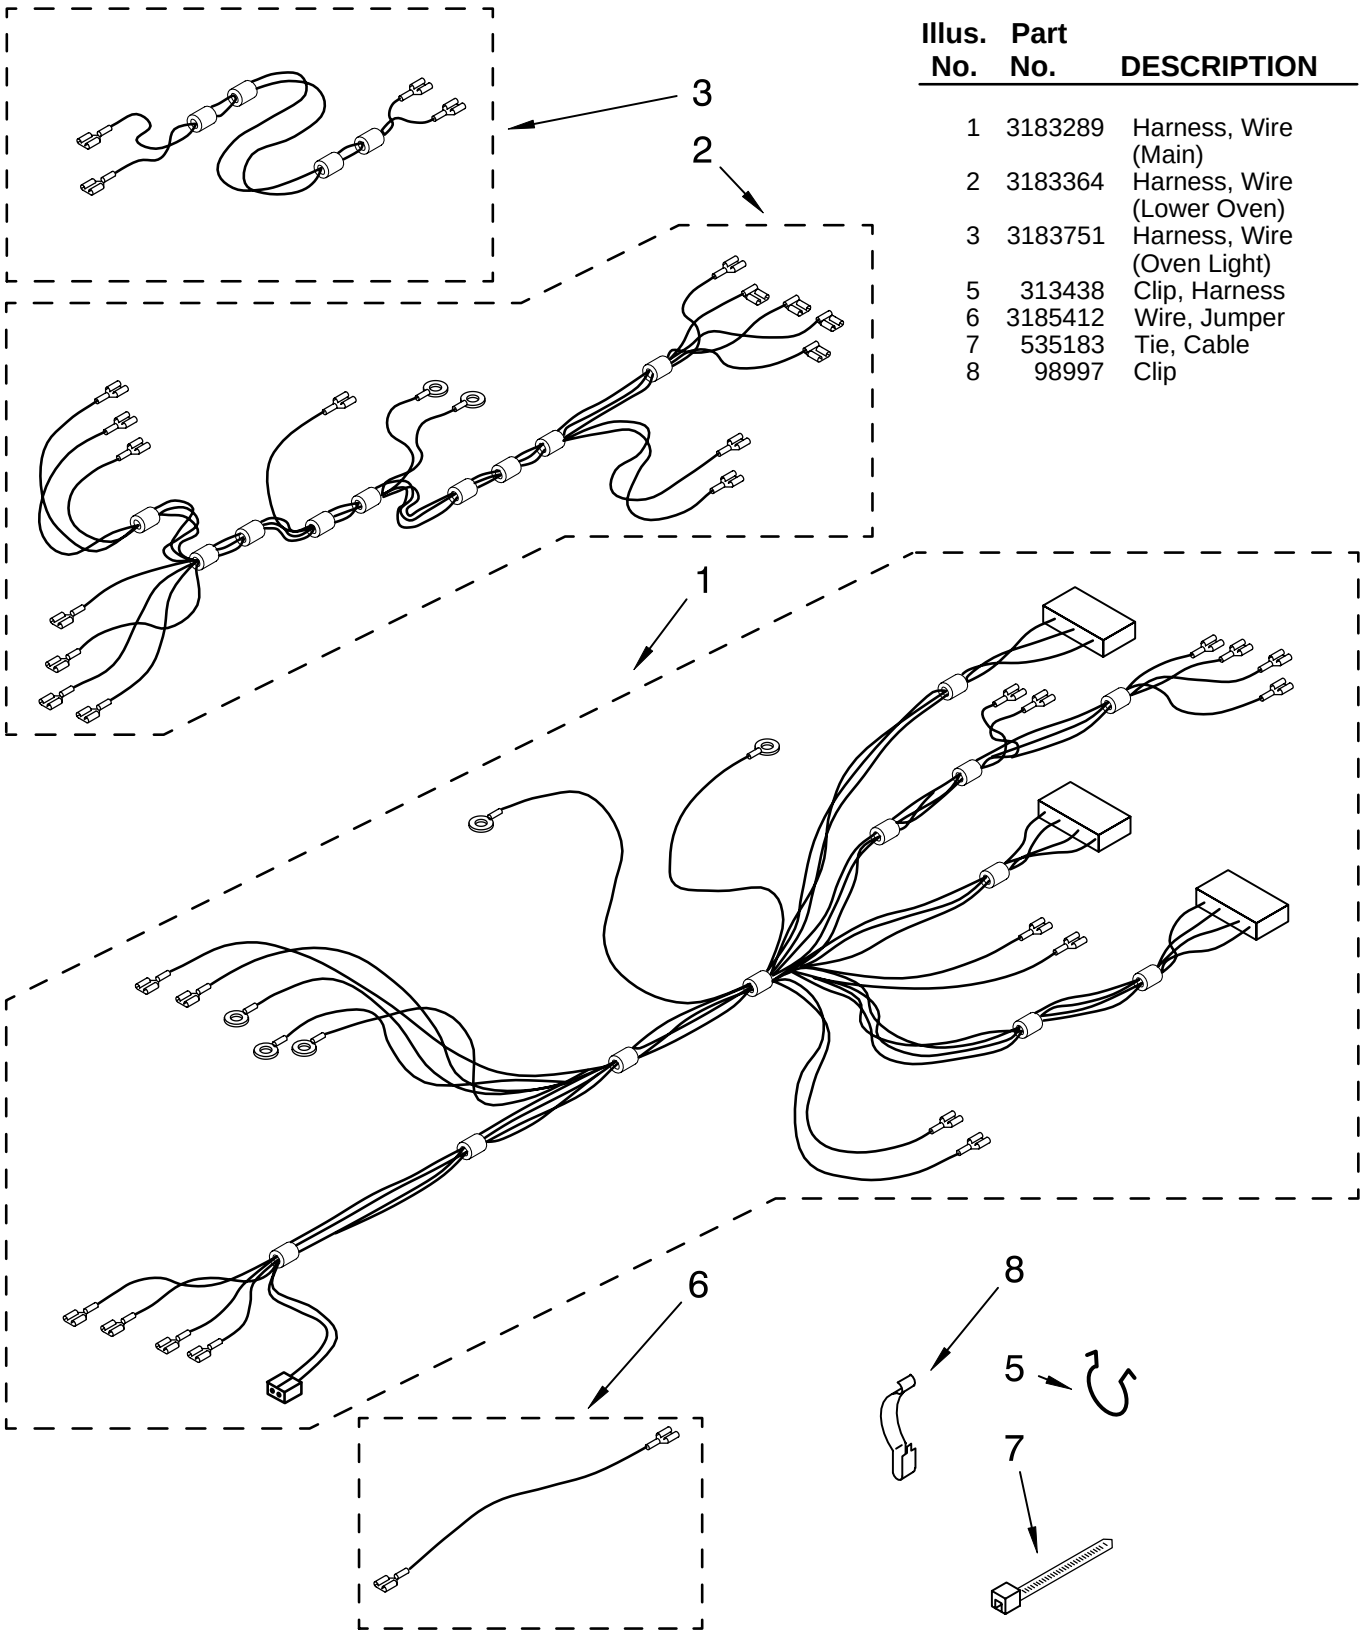

Illus. No.	Part No.	DESCRIPTION
1	3183289	Harness, Wire (Main)
2	3183364	Harness, Wire (Lower Oven)
3	3183751	Harness, Wire (Oven Light)
5	313438	Clip, Harness
6	3185412	Wire, Jumper
7	535183	Tie, Cable
8	98997	Clip